

# Carolina Security Easy As 1-2-3 NX System

**POWER** Light is “on” when premise power is present, flashes to indicate a low battery condition.

**ARMED** Light is “on” when armed, “off” when disarmed. Flashes to indicate a previous alarm.

**INSTANT** Light is “on” when system is set for no entry delay.

**FIRE** Light is “on” to indicate fire alarm, flashes to indicate a trouble condition with your fire alarm system.

**PULL OUT ZONE ID TAB**

**ZONE LIGHTS** are on steady to indicate bypass, slow flash for zone fault, fast flash for service condition.

**READY** Light is “on” when system is ready to arm.

**CHIME Feature:** The keypads will sound a chime when a protected door is opened.

**SERVICE** Light is “on” to indicate a trouble condition with your system.


## Arming System when Exiting:

1. Insure all zones are secure and the green “Ready” light is lit.
2. EITHER enter your code or press the short cut key “EXIT”.
3. System will begin arming count down. Beep... beep... beep... You have 40 seconds to exit. Close and lock door behind you.

## Disarming Alarm:

Enter your four-digit code.

In need of help press here.  
This is a silent alarm

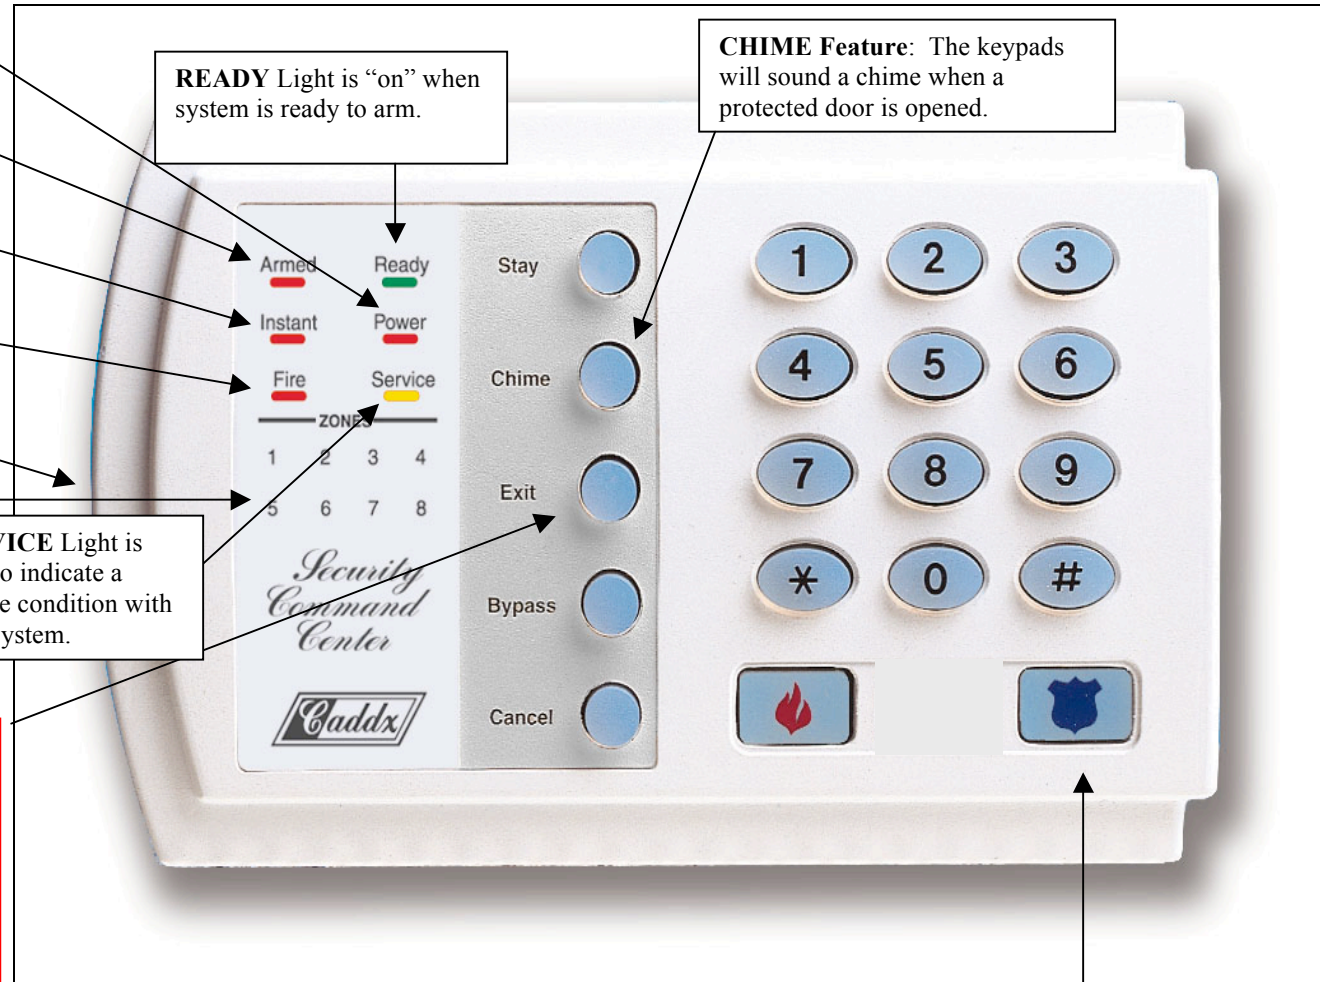

**Need more help call anytime.  
Toll Free 1-800-789-0460**