


Required Items for Installation:

- ADC-V510 camera and power adapter (included)
- Broadband (Cable, DSL, or Fiber-optic) Internet connection with router
- Windows or Mac computer
- Login/password for the customer account
- Ethernet cable for the camera
- If the camera will be connected to a wireless network, you will need:
 - the case-sensitive SSID (wireless network name)
 - the network WEP or WPA key (if encryption is enabled at the router)



Install the Camera(s):

1. **First**, use a standard Ethernet cable to connect the camera to the network router.
2. **Second**, connect the camera's AC adapter and plug it into a non-switched outlet.
3. From a computer on the same network as the camera, log into the customer's account at www.alarm.com.
4. Type www.alarm.com/addcamera into the browser's address bar and follow the on-screen instructions to add the camera to the Alarm.com account.

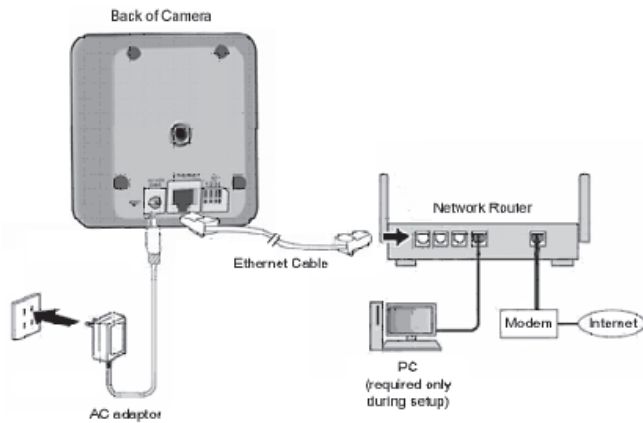

If the camera will be connected wirelessly to the network, configure the camera's wireless settings when setup is complete. Click on the "[Configure wireless network settings for this camera](#)" link and follow the on-screen instructions.

**Questions? Contact Alarm.com Dealer Support at
1.866.834.0470 or support@alarm.com.**

